












AH INCUBATOR - DETAILED VIEW ⊗

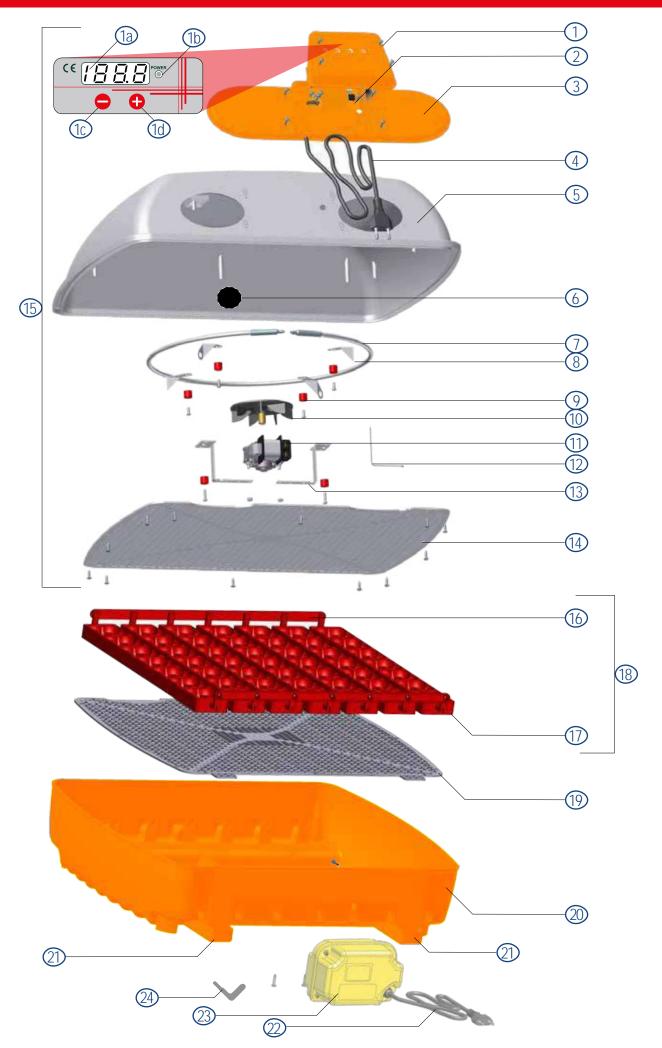

SPARE PARTS *

Here you can find all the available spare parts for your AH incubator



Code number

AH 12: **512-03** AH 24: **524-03** AH 49: **549-03**





Code number

AH 12-24-49: **25549850**





Code number

AH 12: 27512000



Code number

AH 24: **22524000**





Code number

(7)

AH 49: 22549000



Code number

AH 12: **512-05** AH 24: **524-05** AH 49: **549-05**



(10)(11)(13)



Code number

AH 12: 40512000 AH 24: 40524000 AH 49: **40549000**

(15)

 $\overline{7}$



Code number

AH 12: **25512700** AH 24: **25524700** AH 49: 25549700


(16)



Code number

AH 12: **25512400** AH 24: **25524400** AH 49: 25549400


(17)

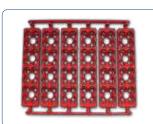

Code number

AH 12: **512-06** AH 24: **524-06** AH 49: **549-06**

(18)

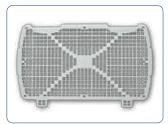

Code number

AH 12: **25512510** AH 24: **25524510** AH 49: **25549510**

(17)

(23)



Code number

AH 12: 25512120 AH 24: 25524110 AH 49: 25549110

(20)



Code number

AH 12-24-49: **556M-1**




Code number

AH 12-24-49: **23800300**






THE EGGS ••

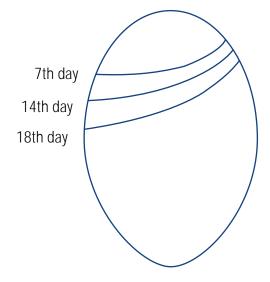


The air cell in an egg provides the chick with air when it is ready to start breathing on its own and hatch from the egg. As the chick starts breathing, there is a buildup of carbon dioxide in the egg, which prompts the chick to break through the egg to get fresh air.



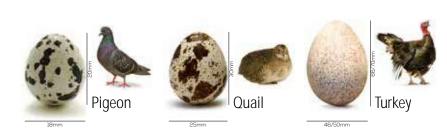

CHOOSING THE EGGS

 



Eggs with low hatching rate



Eggs to be discarded









